



FC-100DC Photo/Visual System Chart

- 6. CAA (SKY90) [TKA21200]
- 11. Extension tube (S) [TKP00105]
- 14. Coupling (L) [TKP00104]
- 15. Visual adapter (FS-60CB) [TKP20005]
- 16. Aux. ring (FS-60CB) [TKP20001]
- 18. 76D Reducer [TKA18580]
- 32. Camera mount DX-S (EOS) [TKA01250]
- Camera mount DX-S (Nikon) [TKA01254]

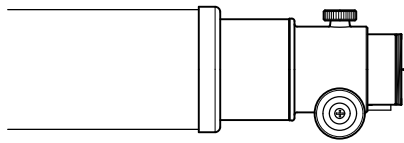


- 33. Camera mount DX-60W (EOS) [TKA20245]
- Camera mount DX-60W (Nikon) [TKA20246]
- 34. DSLR
- 36. TCA-4 [TKA00210]
- 46. Eyepiece adapter (31.7) [TKP00101]
- 47. Eyepiece (31.7)
- 49. Diagonal prism MC (31.7) [TKA00547]
- 60. Extender C2X [TKA00594]
- 67. Extender Q1.6x [TKA00595]
- 80. 76D Flattener [TKA18582]
- 81. Coupling (DT) (FS-60CB) [TKP20006B]
- 82. SD Ring [TKA20583]

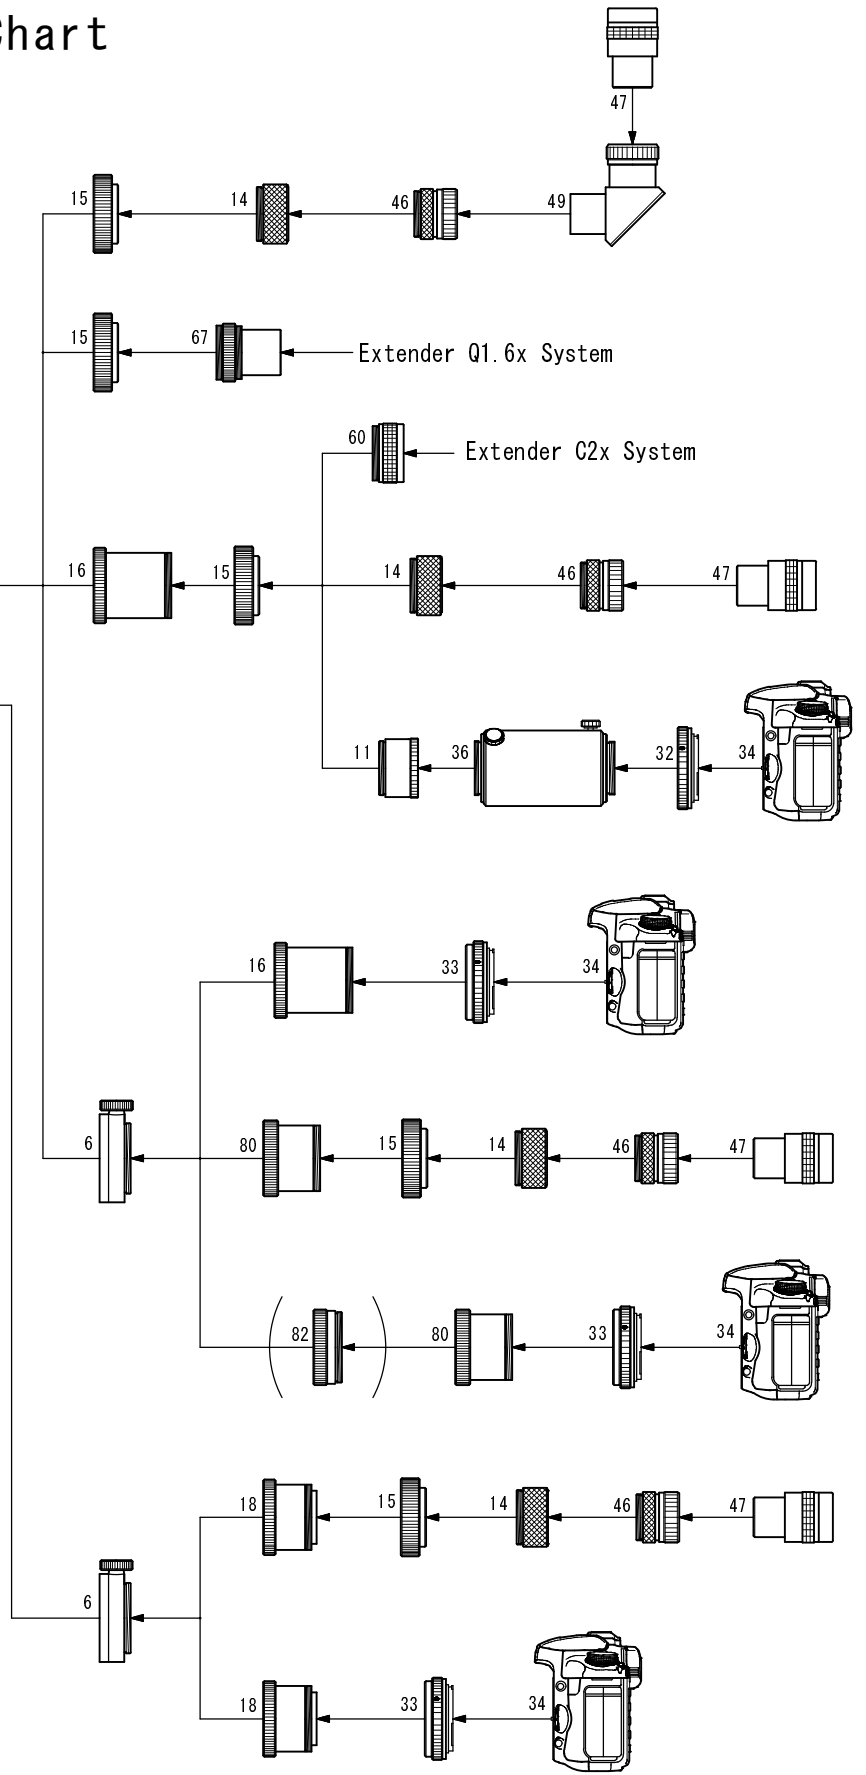

FC-100DC Extender-Q 1.6x System Chart

- 15. Visual adapter (FS-60CB) [TKP20005]
- 32. Camera mount DX-S(EOS) [TKA01250]
Camera mount DX-S(Nikon) [TKA01254]
- 34. DSLR
- 36. TCA-4 [TKA00210]
- 46. Eyepiece adapter(31.7) [TKP00101]
- 47. Eyepiece (31.7)
- 48. Eyepiece (50.8)
- 49. Diagonal prism MC 31.7 [TKA00547]
- 61-A. Vari-tube (L) [TKA00586]
- 61-B. Vari-tube (S) [TKA00587]

- 62. Adapter (EX-Q) [TKA00588]
- 65. EC ring [TKA00590]
- 66. 50.8 adapter (EX-Q) [TKA00596]
- 67. Extender-Q1.6x [TKA00595]
- 74. Diagonal mirror [TKA00543]
- 75. Adapter (DM) [TKA00111]
- 81. Coupling (DT) (FS-60CB) [TKP20006B]

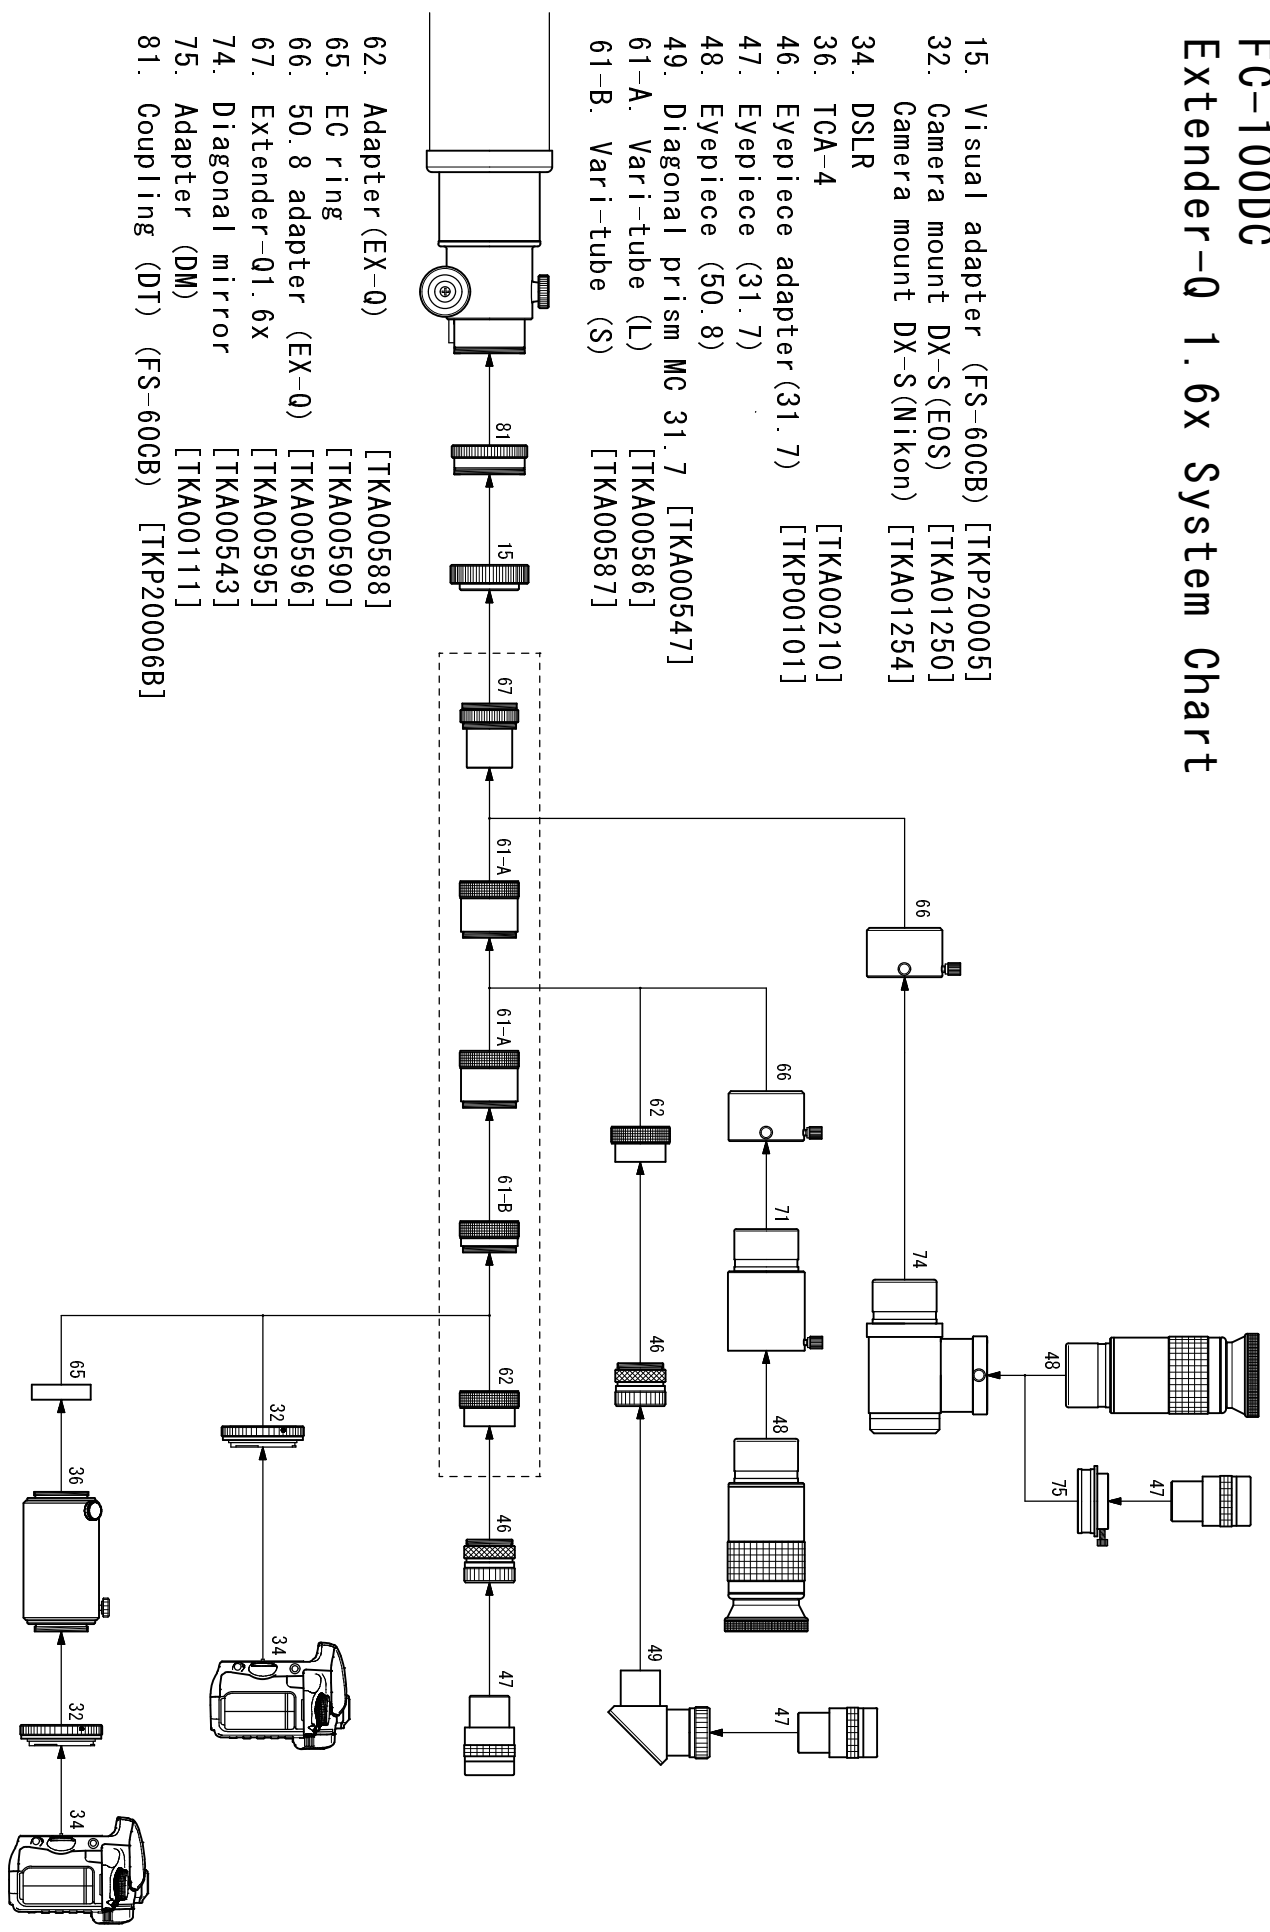

FC-100DC Extender C2X System Chart

- 11. Extension tube (S) [TKP00105]
- 14. Coupling (L) [TKP00104]
- 15. Visual adapter (FS-60GB) [TKP20005]
- 16. Aux. ring (FS-60GB) [TKP20001]
- 32. Camera mount DX-S (EOS) [TKA01250]
Camera mount DX-S (Nikon) [TKA01254]

- 34. DSLR
- 35. CA-35 (M43→M42) [TKA00205]
- 36. TGA-4 [TKA00210]
- 38. ϕ 30.5mm filter
- 46. Eyepiece adapter (31.7mm) [TKP00101]
- 47. Eyepiece (31.7mm)
- 49. Diagonal prism MC(31.7) [TKA00547]
- 60. Extender C2X [TKA00594]
- 81. Coupling (DT) (FS-60GB) [TKP20006B]

